


General purposing, installable to the standard mounting rail with daily and weekly programs

- timing range: 1 week
- timing steps: 1 minute
- storable programs: 8
- Pre-programmed combinations: 10
- 12 or 24 hours mode
- Independent from timing ON-OFF switching possibility


Technical data

- Operating voltage: 230 V, 50-60 Hz
- Maximum load: 16 A, 250 V AC (cos ϕ = 1)
- Power consumption: max. 4.5 VA
- Protection degree: IP 20
- Protection class: II. class
- Operation reserve: 360 hours
- Mechanical life: 10^7 switch
- Electrical life: 10^5 switch
- Mounting: 35×7,5 mm size rail
- Display: LCD
- Relative humidity: 35 - 85 %
- Ambient temperature: -10 °C...55 °C
- Weight: 125 g

Descriptions of functions

- 1, First time connect the switch to the network and charge the battery fullfilling. Then press the „RESET” button.
- 2, The switch is operating in 24 hours clock mode by default. If you want to switch 12 hours mode than you have to press and hold „” button for 5 seconds(the LCD shows „AM”). If you want to change it back to 24 hours mode than press it again for 5 seconds.


Programming

Steps	Buttons	Programming
1	Press the „P”	„Ion” time setting (display shows „1”)
2*	Press the „D+”	Select the days of the week. (If you want to same settings for each day, you don't need to press the button).
3	Press the „H+/M+”	Settings of the hours and minutes
4	Press the „P”	loff time setting (display shows „l off”)
5	Press the „D+”	Select the day of the week. (If you want to same settings for each day, you don't need to press the button)
6	Press the „H+/M+”	Settings of the hours and minutes
7	Repeat steps 2-6	Setting of the 2-8 on/off time
8**	Press the „  ”	Completion




Comment

Delete of the settings, press the „MANUAL” than the LCD shows „-:-:-”, to confirm the deletion.Press „MANUAL” button again to the original setting.


*10 pre-programmed combinations (1. MO TU WE TH FR SA SU; 2. MO TU WE TH FR; 3. SA SU; 4. MO; 5. TU; 6. WE; 7. TH; 8. FR; 9. SA; 10. SU) (MO: monday, TU: tuesday, WE: wednesday, TH: thursday, FR: friday, SA: saturday, SU: sunday)

**If it isn't necessary to store 8 programs, press „” button finally.

Settings of the switch

- (1) Press the „” and „D” to display of the corresponding date
- (2) Press the „” and „H+” to display of the corresponding hour
- (3) Press the „” and „M+” to display of the corresponding second
- (4) Press the „MANUAL” button to show AUTO ON or AUTO OFF.(In case of On programming AUTO ON, In case of OFF programming AUTO OFF.)

Press the „MANUAL” button to select ON/OFF/AUTO modes

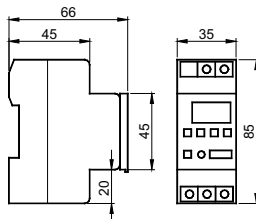

Ez a dokumentum előzetes bejelentést nélkül megváltozhat! Naprakész információk a honlapon!

This document could be modified without notice. Updated information on Website.

Änderungen am Dokument ohne Ankündigung möglich. Aktuelle Informationen finden Sie auf unserer Webseite.

Zastřegamy možnosť zmeny niniejszego dokumentu bez uprzedzenia! Bieżące informacje można znaleźć na stronie internetowej!

Acest document poate fi modificat fără o notificare prealabilă! Informații actualizate pe pagina noastră de internet!

Ovaj dokument se može promjeniti bez prethodnog najave! Aktuelne informacije možete naći na web-sajtu!

Ta dokument se lahko spremeni brez predhodnega obvestila! Posodobljene informacije najdete na spletni strani!

Questo documento può cambiare senza preavviso. Informazioni aggiornate si trovano sul sito internet.

Tento dokument sa môže zmeniť bez predchádzajúceho oznámenia! Aktuálne informácie na web-stránke!

Tento dokument může být změněn bez předchozího oznámení! Aktuální informace na web-stránce!

Ovaj dokument se može promijeniti bez prethodne najave. Važec informacije su na web-stranici.

